

SCREENING VIBRATORS (Sieving equipment)

Screening vibrators are used to separate dimensionally products in bulk.


They can separate the products of different size or shape.

The equipment consists of a frame equipped with an area of receipt of workpieces, of two engines generating vibration and a grid of separation.

On one side are transferred products that can pass through the grid, and on the other, too big products.

Characteristics of the most common equipment:

Model	Sieving surface (mm)	Weight (Kg)	Power (kw)	Size (mm)
SEPV 35	350x730	360	2x0,125	1320x620x800
SEPV 50	500x850	500	2x0,25	1800x750x680

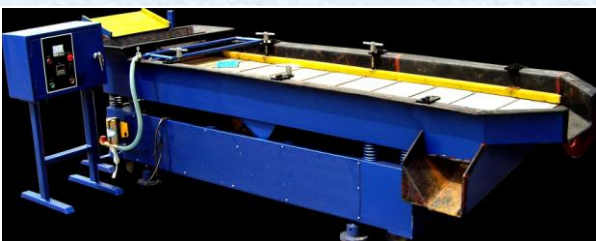

ABC SwissTech

Switzerland :

Eplatures-grise 17 - CH-2300 La Chaux de Fonds
Tél : +41 32 930 2950 - Fax : +41 32 930 2930

France :

14 rue du clos jeantot – 25500 Montlebon
Tél : +33 6.8219.2464

tribofinition@abcswisstech.ch
www.abcswisstech.com

